



| BASMEL | BASSKEEPER WALL | CAMOU | COOKIE | CORALREEF | COSMOS | DECOART | FOAMSORB | IVORY | LFTONE | NOVEN | PYRAMID | REFLEX | SEAFOAM | SNOWSORB | STRIPESORB | STRIPESORB ARC | SWELL | WAVYFUSER | WUSORBER | DUNA

Prior to application, always clean all surfaces before applying any glue ensuring them free of dust or grease. Mark the measurements of the panel on the surface you are applying the panel to. Apply double sided temporary adhesive patches to the back of the panel as shown. The adhesive temporary patches are activated by pressure. To ensure their maximum adhesion strength they are not repositionable, so measure twice and glue only once.

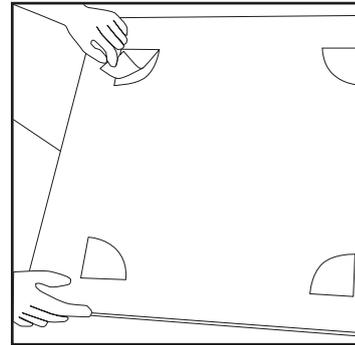


Then apply as shown in grey, the definitive PU mounting glue without solvents, for permanent applications (not-included). Apply the cords of glue marked in grey as shown on this left example image.

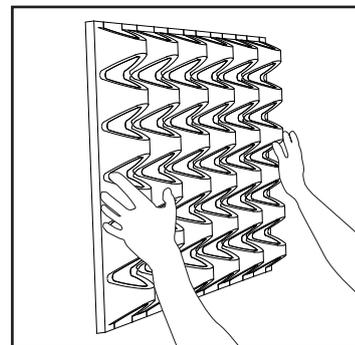


Place the panel on the surface and press it gently and homogeneously during the mounting glue's curing time, average aprox. time 2 hours.

For ceiling panels a temporary auxiliar supporting bar (anchor) between the floor and the panel, can be used .

Ensure taking extra care to always use a protective thick and enough dense and very clean material like foam (or a dense pillow) between the panel and the anchor to ensure not to damage the panel finishings.

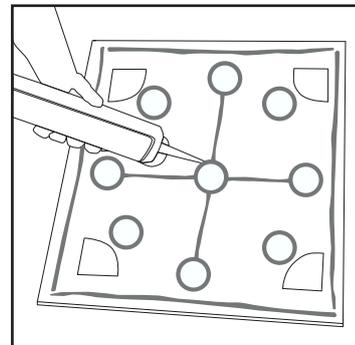

Between the anchor and the floor a protective material like a simple piece of wood or dense foam also should be used to protect floor finishings.

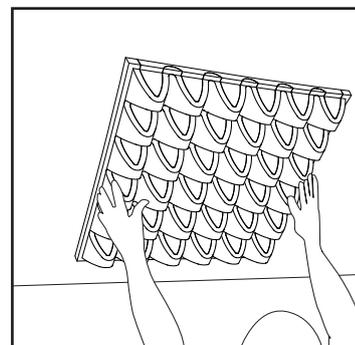

NOTICE

Adhesive time is entirely dependant on the weight of the panel to be glued . Always consult the mounting glue specifications. Adhesive gluing times can vary with humidity and temperature. Make sure that the room temperature and humidity is within the acceptable product values available on our website.

