

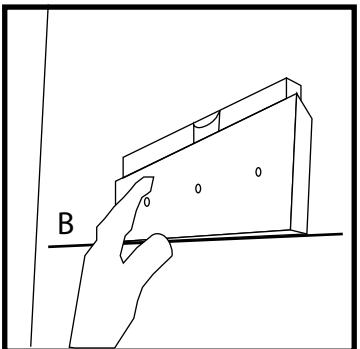


Accessories' kit; the product is supplied with the necessary accessories.


Measure the placement of the panel using a tape measure, a pencil, a ruler and a level bubble. From the top panel line, measure and orthogonally mark the "A" distance. With a level define the "B" line.

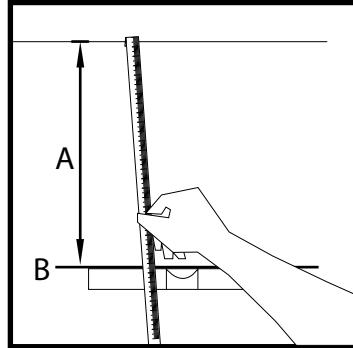

Center the accessory on the wall inserting a pencil through the wooden accessory's holes to mark the needed points on the wall.

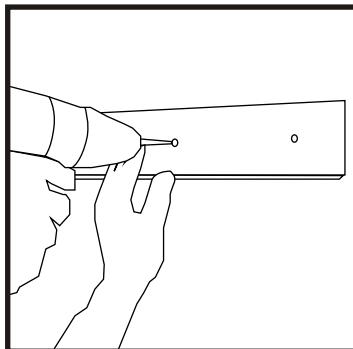

Drill the holes on the wall. Insert the nylon plugs in wall and attach the accessory with a screwdriver

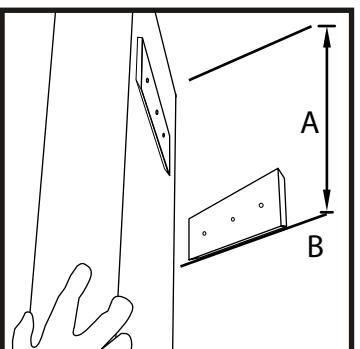

Then fit the panel into the mounting accessory.

